


# How To Make A NoMate® Spiral Applicator

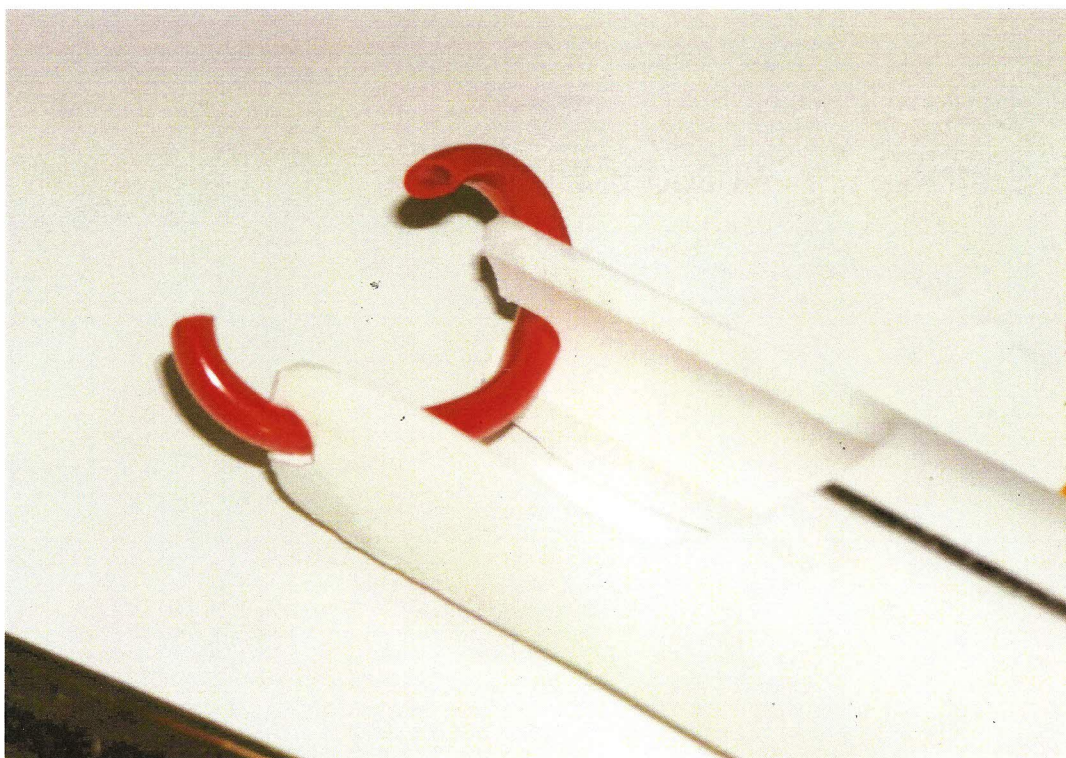






Cut a piece of 1" PVC pipe to desired length. Remember that to increase the overall length of the finished spiral applicator, it can be slipped over a broom or mop handle. Or cuppled with another piece of PVC pipe.

(1) Center and drill a 1" hole through both sides of the PVC pipe, 1 3/4" from one end of the pipe,


(2) Then center and drill a 3/16" hole through both of the opposite sides of the pipe, 3/8" from the same end, as shown.

(3), (4) Cut away sides and middle of pipe, down to the one inch hole as shown, then

(5) Cut away side and middle of pipe down to the 3/16" hole. Ream slots to allow for easy spiral application.

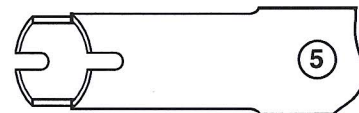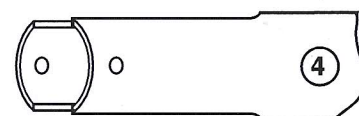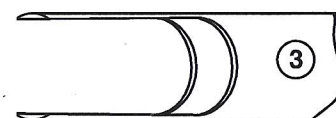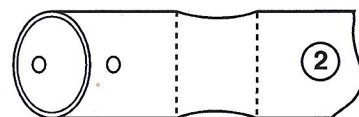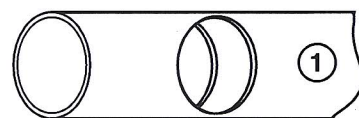

## Finished Sprial Applicator

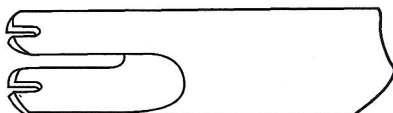

**SCENTRY**  
BIOLOGICALS INC.

610 Central Avenue  
Billings, Montana 59102  
(406) 248-5856  
800-735-5323  
[www.scentry.com](http://www.scentry.com)